


Recommended Installation


When possible, the Anprolene Sterilizer should be located near an outside wall, and exhaust directly to the outside by means of $\frac{3}{4}$ " (1.9cm) I.D. tubing.

Through-wall mounting kits are available from Andersen.

Note: Sterilizer must be placed in an area that can maintain 68°F or above room temperature.

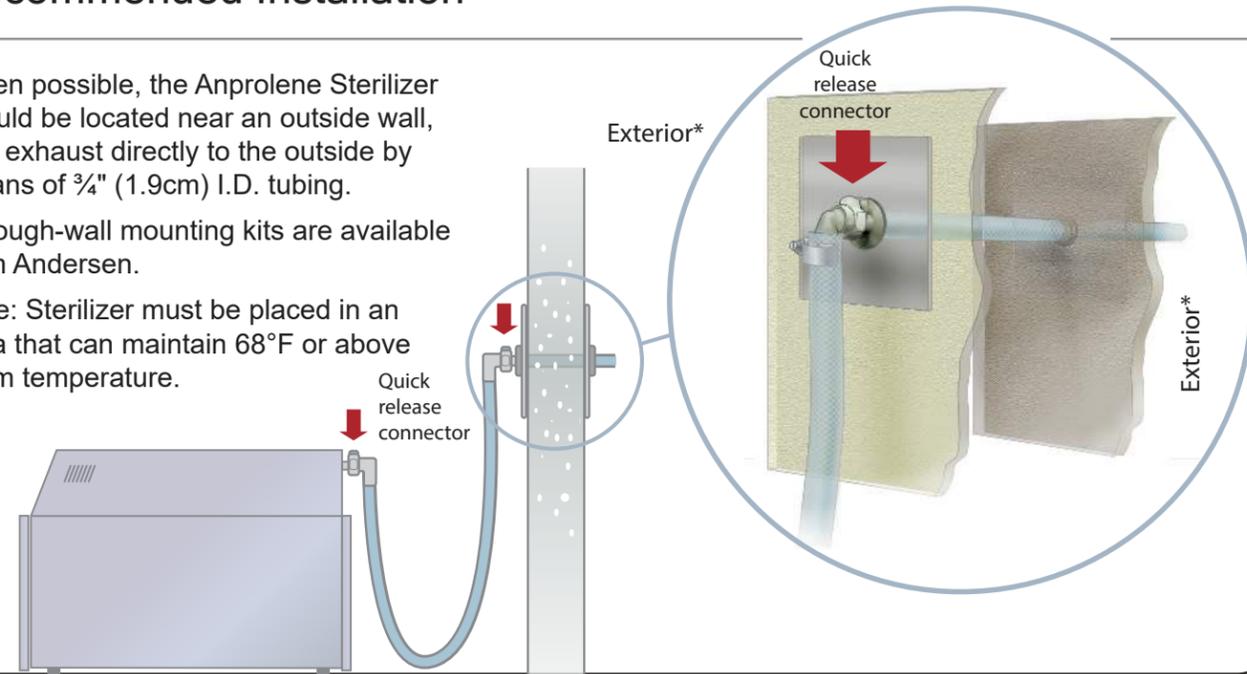


Alternate Option 1 Remote location installation

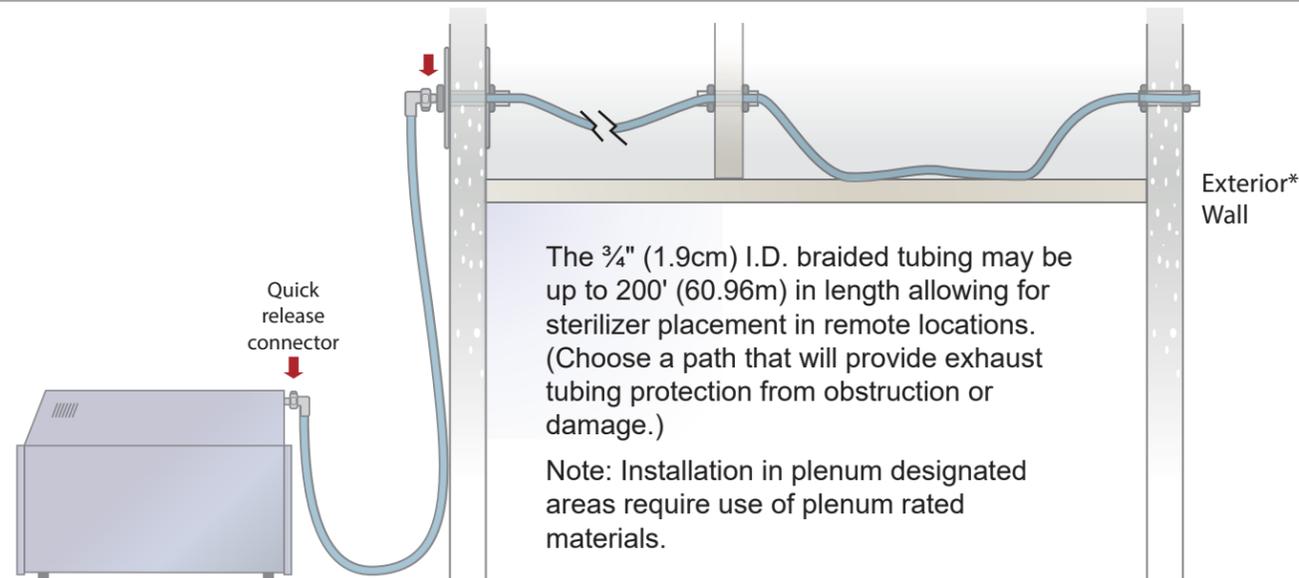

Alternate Option 2 Soffit or eave termination

The through-wall mounting kit can also be used as a ceiling mount to allow eave or soffit termination.

Straight quick disconnect fittings and vent screens are available from Andersen.

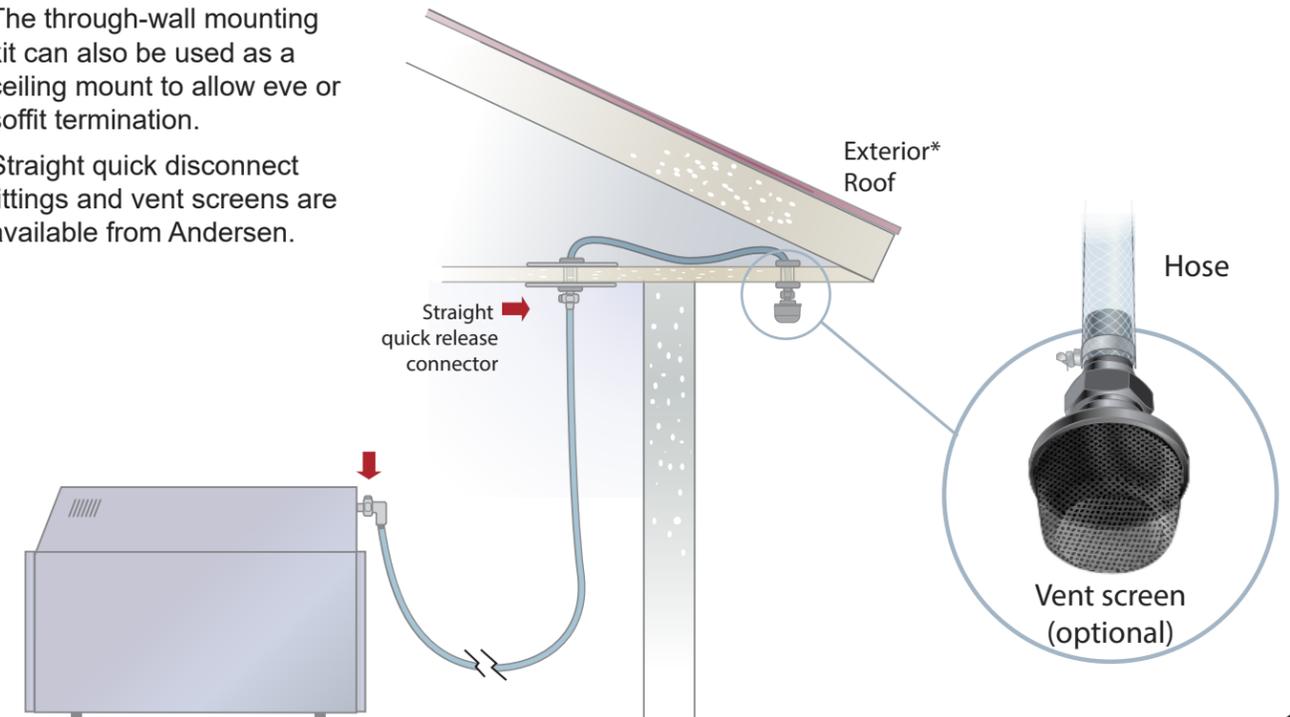

*** Please note:** AAMI guidelines recommend all EO sterilizers be vented through a dedicated exhaust line to the outside atmosphere directly or through an emission control system. The vent should not terminate within 25 feet of any building air intake source or near pedestrian or animal traffic, nor should it allow EO release into or to reenter the building.

For further installation assistance please call your Andersen representative or 1.800.523.1276



Health Science Park • 3202 Caroline Drive
Haw River, NC 27258-9564 USA
800.523.1276



sterility.com

Join Us: Follow, Like, Share



Distributed in Europe by: **H.W. Andersen SARL**
Distributed in UK, Australia, Africa & Middle East by:
H.W. Andersen Products, Ltd.
anderseneurope.com